Handheld Digital Thermometer

DP-700

Instruction Manual



Thank you for purchasing this RKC instrument. In order to achieve maximum performance and ensure proper operation of your new instrument, carefully read all the instructions in this manual. Please place this manual in a convenient location for easy reference.

SYMBOLS

WARNING: This mark indicates precautions that must be taken if there is danger of electric shock, fire, etc., which could result in loss of life or injury.

: This mark indicates that if these precautions and operating procedures are not taken, damage to the instrument may result.

: This mark indicates that all precautions should be taken for safe usage.

: This mark indicates important information on installation, handling and operating procedures.

: This mark indicates supplemental information on installation, handling and operating procedures.

: This mark indicates where additional information may be located.

/ WARNING

- Never use this product for medical equipment.
- This product must be used in accordance with the specifications to prevent fire or damage to instrument and equipment.
- This product is not intended for use in locations subject to flammable or explosive gases.
- If any abnormality such as smoke, smell of burning or noise was found, do not use the product. If so, fire may occur.
- RKC is not responsible if this product is repaired, modified or disassembled by other than factory-approved personnel. Malfunction can occur and warranty is void under these conditions.

IMR01X01-E1 j_1

CAUTION

- All precautions described in this manual should be taken to avoid damage to the instrument or equipment.
- Prevent metal fragments or lead wire scraps from falling inside instrument case to avoid electric shock, fire or malfunction.
- Do not drop nor apply strong impact to the product. If so, failure may result.
- Do not use the product while the battery cover is being removed. If so, failure may result.
- Load a battery so that its polarity will meet the indication on the product. If not, the battery electrolyte may leak or heat be generated to result in injury or failure.
- If the product is not used for a long period of time, remove the battery from the mainframe. If not, the battery electrolyte may leak to result in failure.
- Battery service life may change depending on battery performance, operating condition and measuring environment.
- Use this product within the following ambient temperature and ambient humidity.
 - Allowable ambient temperature: -20 to +50 °C
 - Allowable ambient humidity: -5 to 95 %RH

(Absolute humidity: MAX.W.C 29 g/m³ dry air at 101.3 kPa)

- Do not use or store the product in places such as listed below:
 - Rapid changes in ambient temperature which may cause condensation.
 - Corrosive or inflammable gases.
 - Direct vibration or shock to the mainframe.
 - Direct water, oil, chemicals, vapor or steam splashes. *
 - Excessive dust, salt or iron particles. *
 - Excessive induction noise, static electricity, magnetic fields or noise.
 - Direct air flow from an air conditioner.
 - Exposure to direct sunlight.
 - Excessive heat accumulation.
 - * DP-700A: Equal to IP67, DP-700B: Equal to IP54
- Turn off the power supply before cleaning the instrument.
- Do not use a volatile solvent such as paint thinner to clean the instrument.
 Deformation or discoloration will occur. Use a soft, dry cloth to remove stains from the instrument.
- To avoid damage to instrument display, do not rub with an abrasive material or push front panel with a hard object.

NOTICE

- This manual assumes that the reader has a fundamental knowledge of the principles of electricity, process control, computer technology and communications.
- The figures, diagrams and numeric values used in this manual are only for purpose of illustration.
- RKC is not responsible for any damage or injury that is caused as a result of using this instrument, instrument failure or indirect damage.
- Periodic maintenance is required for safe and proper operation of this instrument. Some components have a limited service life, or characteristics that change over time.
- Every effort has been made to ensure accuracy of all information contained herein. RKC makes no warranty expressed or implied, with respect to the accuracy of the information. The information in this manual is subject to change without prior notice.
- No portion of this document may be reprinted, modified, copied, transmitted, digitized, stored, processed or retrieved through any mechanical, electronic, optical or other means without prior written approval from RKC.

i-2 IMR01X01-E1

CONTENTS

1. OUTLINE	Page 1
1.1 Checking the Product 1.2 Parts Description 1.3 LCD Displays	2 3
1.4 Function Menu Configuration	
2. PREPARATION BEFORE USE	5
2.1 Loading Battery	5
2.2 Setting Date and Time	6
2.3 Connecting the Temperature Sensor	7
3. BASIC OPERATION	8
3.1 Turn Power On	8
3.2 Measuring Temperatures	
4. JUDGING MEASURED TEMPERATURES [SIM JUDGING FUNCTION]	
4.1 Registering Tag Names (Measured Objects)	11
4.2 Setting the Judgment Range of High/Low Limit Temperatures	
4.3 Judging Measured Temperatures	
5. RECORDING MEASURED TEMPERATURES	
[LOGGING FUNCTION]	17
5.1 Manual Recording	18
5.2 Automatic Recording	19
5.3 Retrieving Recorded Data	21
5.3.1 Retrieving only recorded data with specified tag name (Tag Fil	· ·
5.3.2 Retrieving recorded data with specified log registered No. (Log	
5.4 Deleting Recorded Data	
5.4.1 Deleting only one recorded data item (Delete?)	
5.5 Defragmenting Recorded Data	
6. PEAK HOLD/BOTTOM HOLD	26

IMR01X01-E1 i-3

7. REGISTERING USER NAMES [ONLY FOR DP-	Page 700B]28
8. INITIAL SETTING	32
■ To select the display language (English/Japanese) ■ To select the date format	
■ To select the sensor type	33
■ To select the display unit (°C/°F)	33
■ To select the decimal point position	34
■ To correct the temperature display value (PV Bias)	34
■ To lessen the fluctuation of a display value caused by noise (D	igital Filter)35
■ Saving battery consumption (Auto Power OFF)	35
■ Locking/Unlocking setting operation (Operation Lock)	36
9. MANAGING DATA BY PC [ONLY FOR DP-700E	3]37
9.1 Connecting PC to DP-700B	37
9.2 Storing Data	38
9.3 Disconnecting DP-700B from PC	41
10. APPENDIX	42
10.1 Replace the Battery	42
10.2 Cleaning	
10.3 Troubleshooting	
10.3.1 Error displays	
10.3.2 Problem and solution	
10.4 Specifications	47

1. OUTLINE

This Chapter describes features, package contents and model code, etc. The handheld digital thermometer DP-700 has the following features:

■ Wide temperature measurement is possible

```
Thermocouple K: -200 to +1372 °C (-328 to +2501 °F), -199.9 to +999.9 °C (°F)
Thermocouple J: -200 to +1200 °C (-328 to +2192 °F), -199.9 to +999.9 °C (°F)
RTD (Pt100): -200 to +850 °C (-328 to +1562 °F), -199.9 to +850.0 °C (-199.9 to +999.9 °F)
```

■ Names of measured objects can be registered.

Names of measured objects can be registered using 11 characters maximum. (DP-700A: maximum 5 tags DP-700B: maximum 99 tags)

■ Simplified Judging Function

Judgment can be immediately made for each measured object. (Temperatures to judge the high/low limits need to be set.)

■ Logging Function (Manual logging mode, Automatic logging mode)

Measured object, measured temperature, date, and user name can be manually or automatically recorded in the memory. (DP-700A: maximum 99 logs DP-700B: maximum 9999 logs)

■ Peak and Bottom Hold Function

The maximum and minimum measured-temperatures can always be stored.

- Can be operated for 400 hours continuously using one Type LR6 (based on IEC and JIS) alkaline battery.
- Data can be controlled using personal computers (Only for the DP-700B)

Measured data can be stored in the file in the CSV format using the USB port of each personal computer.

1.1 Checking the Product


Before using this product, check each of the following:

- Model code
- Check that there are no scratch or breakage in external appearance.
- Check that all of the items delivered are complete. (See below)

■ Model code

DP-700 □/□ (1) (2)	B: High performance t	gs, Backed up by SRAM) ype 99 logs, Backed up by EEPROM)	(2) Display language J: Japanese E: English
□ Strap ······	·······1	☐ LR6 (IEC and JIS) Alk ☐ USB cable (Only for D naged, or if your manual is	P-700B)1
	ales office or the agent.		moomprovo, provoc

1.2 Parts Description

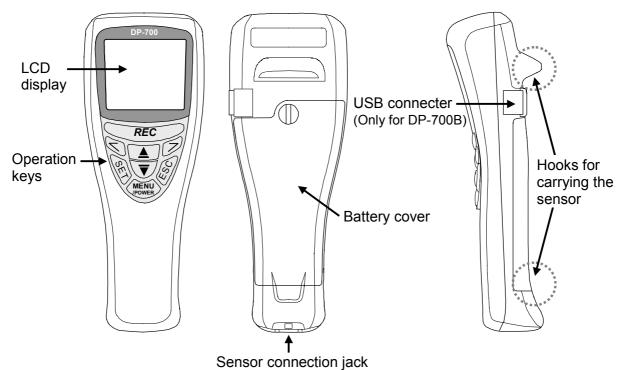

LCD display

Displays various information on measured temperature, measured date, set details of each function and error number.

Operation keys

MENU/POWER key:

- Used to turn on/off the power. Pressing this key for more than 2 seconds can turn off the power.
- Can call up or select the function menu screen while the power is turned on.
- Can display the list of characters in the message column while characters are being entered.

SET key:

• Establishes operation during execution.

ESC key:

• Suspends operation during execution. If suspended, returns to the displayed state or screen just before being suspended.

UP key (▲)/DOWN key (▼):

- Can select measured objects or user names already registered while the measurement screen is being displayed.
- Can select the list of characters while characters are being entered.

Left shift key (<)/Right shift key (>):


- Can select display details in the message column while the measurement screen is being displayed.
- Can move to the preceding or next function menu screen while the function menu (Fn0 to Fn9) screen is being displayed.
- Can move the cursor character by character while characters are being entered.

REC key:

- When in manual logging mode (manual recording), records the measured temperature and date at the time when this key is pressed.
- When in automatic logging mode (automatic recording), used as a recording START/STOP key.

1.3 LCD Displays

The following details are displayed on the LCD screen.

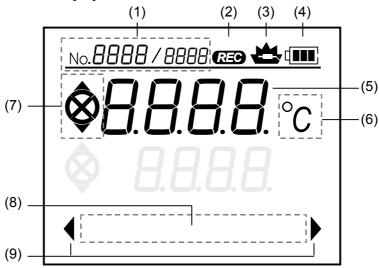

(1) No.8888 (Number display)

- If measured object or user name is displayed, displays the corresponding registered number.
- When recorded data items are displayed, displays "Display memory number/Total memory number of recorded data items of those data items.

(2) **REO** (Log execution display)

- When in manual logging mode (manual recording), displayed only when the REC key is pressed.
- When in automatic logging mode (automatic recording), continues lighting during recording and continues flashing during recording stop.

(3) (Burnout display)

Displayed when the sensor is broken, shorted or imperfectly connected.

(4) (Remaining battery service life display)

Displays the remaining battery service life (reference only).

	Service life remains long.				
	Service life is going to shorten.				
Service life is going to expire. (Battery replacement is required.)					
	Service life has expired. (Immediate battery replacement is required.)				

(5) Measured temperature display

Displays the measured temperature. In addition, displays information on error number, etc. if an error occurs.

(6) °C or °F (Temperature unit display)

(7) O \hat{x} \times (Simplified judgment display)

Symbols to judged the measured temperature. To judge the measured temperature using these symbols, it is necessary to set the judgment points of its high and low limits.

â	NG	Measured temperature exceeds judgment point of high limit temperature.
0	ок	Measured temperature is within judgment points.
Measured NG judgment		Measured temperature is below judgment point of low limit temperature.

(8) Message column

Displays function menu screen name, measured date ¹, measured object ³, user name ^{2, 3} etc.


- ¹ Set the measured date, if necessary. (See P. 6)
- ² Not displayed if no user name is registered.
- ³ Number of registered characters: 11 maximum

(9) ◀,▶

Displays message selection.

1.4 Function Menu Configuration

The DP-700 is provided with a function menu used to select and then set any function necessary for measured-temperature judgment and recording (logging). There for, set the desired function as needed by the customer. For details, refer to the relevant pages.

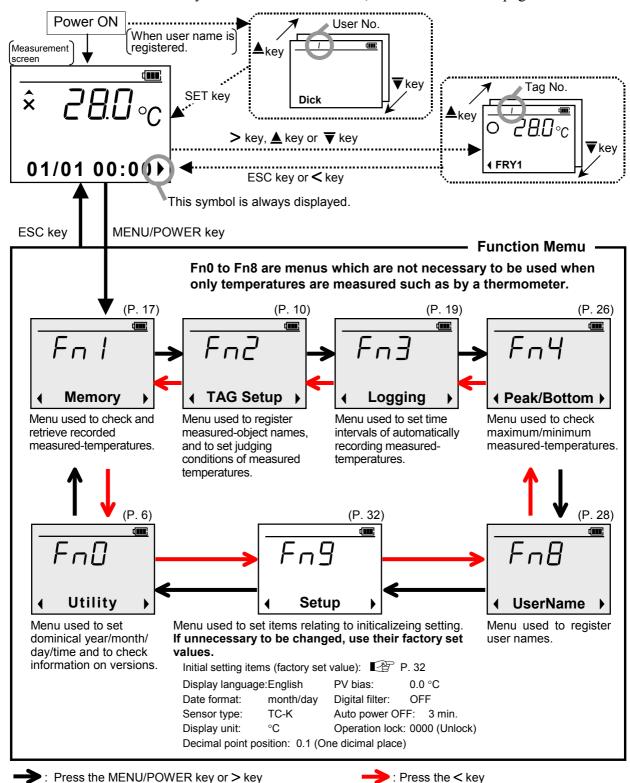


2. PREPARATION BEFORE USE

This chapter describes preparations necessary for operating this instrument for the first time.


2.1 Loading Battery

■ Procedures

1. Loosen the battery cover.

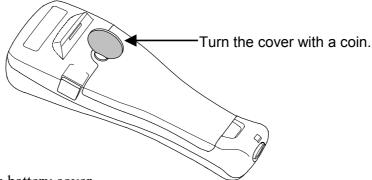


- 2. Remove the battery cover.
- 3. Load a battery without mistaking its polarity.

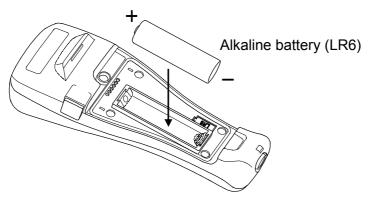

- 4. Then, firmly tighten the battery cover.
- Insufficient tightening cannot assure the effect of water resistance (DP-700A: Equal to IP67, DP-700B: Equal to IP54).
- After the battery is loaded, the instrument is ready to be reset-started.

The function menu "Utility (Fn0)" for setting the dominical year is displayed on the LCD screen. If no dominical year is set, no calendar function can be used. Always set the year if the calendar function is used.

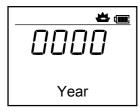


Year setting screen

Pressing the ESC key twice can display the measurement screen.

For the battery life or replace method, see 10.1 Replace the Battery (P. 42).


2.2 Setting Date and Time

Set the date and time displayed on the measurement screen. This setting is made on the function menu "Utility (Fn0)." The setting procedure is described using an example where the instrument is reset-started (from start on the Fn0 screen).

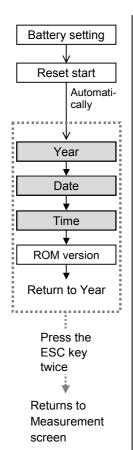


■ Setting year

- 1. Press the < or > key to move the flashing digit.
- 2. Press the ▲ or ▼ key to set the "year."
- *3.* Press the SET key to store the new set value.

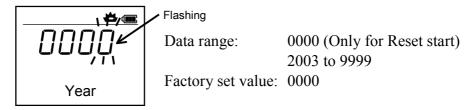

■ Setting month and day


- 1. Press the \triangle or ∇ key to set the "day (month)."
- 2. Press the < key to move the blinking cursor to "month (day)."
- 3. Press the \triangle or ∇ key to set the "month (day)."
- 4. Press the SET key to store the new set value.

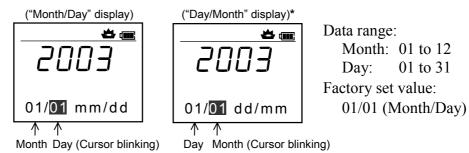

* To display "Day/Month", see the date format screen in "Setup (Fn9)" of the Function menu (P. 32).

■ Setting time

- 1. Press the \triangle or ∇ key to set the "minute."
- 2. Press the < key to move the blinking cursor to "time."
- 3. Press the \triangle or ∇ key to set the "time."
- 4. Press the SET key to store the new set value.

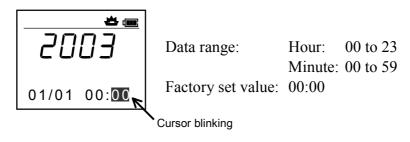

2.3 Connecting the Temperature Sensor

Connect the temperature sensor (sold separately) to the DP-700 mainframe.

Firmly connect the sensor cable to the mainframe so as not to cause imperfect

Temperature sensor

■ Temperature sensor (sold separately)

• JB-716 (rounded end type)

Measuring temperature range:

-40 to +250 °C (-40 to +482 °F)

Protective tube size: ϕ 3.2, ϕ 4.8

Protective tube length: 100 mm, 200 mm,

300 mm

Leadwire length: 1000 mm (1 m)

• JB-715 (needle type)

Measuring temperature range:

-40 to +250 °C (-40 to +482 °F)

Protective tube size: \$\phi 2.1\$
Protective tube length: 100 mm

Leadwire length: 1000 mm (1 m)


In addition to the above, various types of sensors are available. Contact our sales office or your nearest RKC sales agent, if required.

3. BASIC OPERATION

This chapter describes the basic operation of the instrument for temperature measurement.

3.1 Turn Power On

Press the MENU/POWER key. The power is turned on to display the measurement screen.

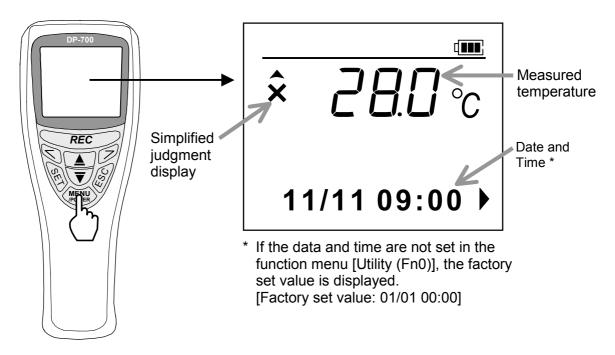

- When the power is turned on for the first time after preparations before operation are finished, "Simplified judgment display" is as the above screen example.
 - For the simplified judgment display, see 4. JUDGING MEASURED TEMPERATURES [SIMPLIFIED JUDGING FUNCTION] (P. 10).
- The power is turned off if no key operation is performed for more than the Auto power OFF time (factory set value: 3 min.) with the power turned on.
 - For the Auto power OFF setting, see **Saving battery consumption (P. 35).**
- What screen is displayed when the power is turned off and then is turned on again?

If the user name is registered to the user number selected, the type of screen displayed first differs.

For the type of screen displayed, see 1.4 Function Menu Configuration (P. 4).

3.2 Measuring Temperatures

To measure temperatures, insert the sensor into or contact it with the measured object. When measuring temperatures, handle the sensor as instructed in the following.

WARNING


- In order to prevent injuries, never direct the sensor tip toward a person.
- In order to prevent burning or frostbite, do not touch the sensor during or just after its use in the high or low temperature environment.

CAUTION

- Use the sensor within its temperature measuring range.
- Firmly insert the sensor cable into the sensor connector of the mainframe.
- If the sensor gets stained, wipe it with a clean cloth.

Example of display screen during measurement:

When a measured object is at a surface temperature of 90.0 °C

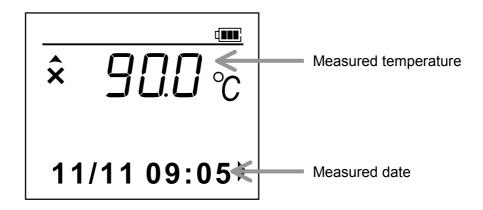

It is possible to record the measured temperature and date in the memory.

For the data recording (logging) method, see **5. RECORDING MEASURED TEMPERATURES [LOGGING FUNCTION] (P. 17).**

4. JUDGING MEASURED TEMPERATURES [SIMPLIFIED JUDGING FUNCTION]


This chapter describes settings and procedures to judge measured temperatures using the simplified judging function.

Before using the simplified judging function, register tag names (measured object names) and also set judgment criteria (judgment points of high and low temperatures). The registration and setting are made on the function menu "TAG Setup (Fn2)."

What is the simplified judging function?

This function is for judging whether or not measured temperatures are within the judgment criteria preset (judgment points of high and low temperatures) and then check judgment results according to simplified judgment symbols.

Screen Configurations of TAG Setup (Fn2) Menu:

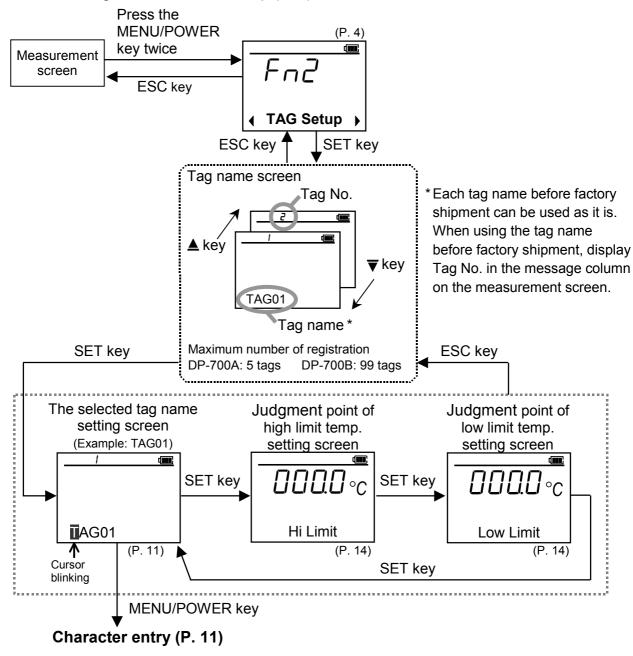


4.1 Registering Tag Names (Measured Objects)

Any measured object mane (maximum number of character: 11 characters) can be registered for each number. The tag name thus registered can be displayed on the measurement screen.

■ Character entry screen

Example: When the tag name screen of Tag No. 1 is selected.

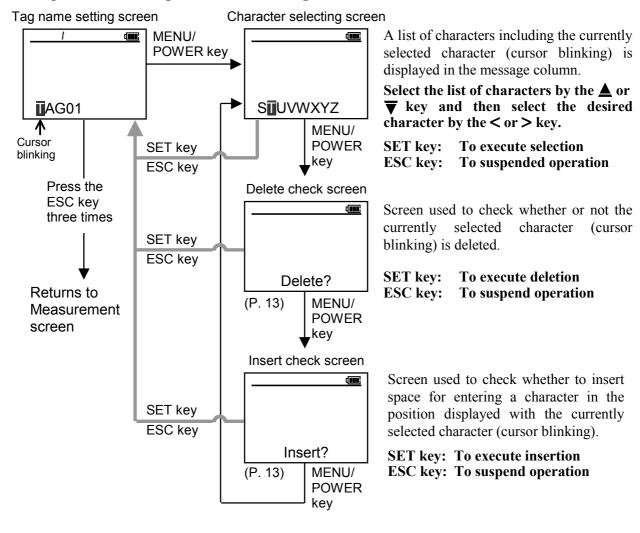

Characters list

Numerals	0123456789	Symbols	@!#\$%&'`	No spaces (no characters)
Alphabets	ABCDEFGHI		+;=^_	can be used.
	JKLMNOPQR		()[]{}	
	STUVWXYZ			Select the list of
	abcdefghi			characters by the $ extstyle extst$
	jklmnopqr			▼ key.
	stuvwxyz			

■ Procedures

Example: Change the tag name of Tag No. 2 from "TAG02" to "PAN02"

1. Press the SET key at TAG Setup (Fn2) screen to display the tag name screen.




2. Press the \triangle key.

The display goes to the tag name screen of Tag No. 2.



3. Press the SET key.

The cursor is displayed in the position displayed with the tag name "T."

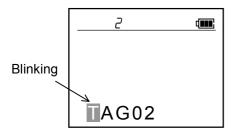


4. Press the MENU/POWER key. The list of characters is displayed in the message column.




5. Press the \triangle key.


The list of characters including "P" is displayed.

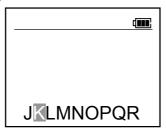


6. Press the > key to move the cursor to the position displayed with "P."

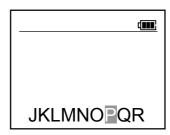

7. Press the SET key to store the new set value. The screen returns to the tag name screen of Tag No.2 and the cursor moves to "A."

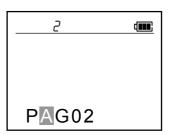

8. Press the > key to move the cursor to the position displayed with "G."

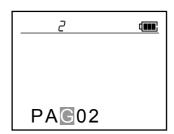


Press the MENU/POWER key. The list of characters is displayed in the message column.



10. Press the ▼ key.


The list of characters including "N" is displayed.

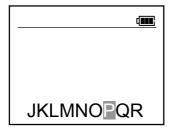

11. Press the < key to move the cursor to the position displayed with "N."



12. Press the SET key to store the new set value. The screen returns to the tag name screen of Tag No.2 and the cursor moves to "0."

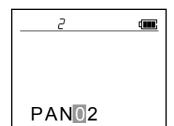

The setting is finished.

When setting the judgment criteria (judgment points of high and low temperatures) succeedingly, press the SET key. (P. 14)

To return to the measurement screen, press the ESC key three times.

How to change the character without displaying the list of characters?

- Move the cursor to the position displayed with the character to be revised by using the < or > key.
- 2. Display the character to be revised by using the ▲ or ▼ key.

How to delete one character?

- Move the cursor to the position displayed with the character to be deleted using the < or > key.
- 2. Press the MENU/POWER key twice to display the screen for checking the deletion.
- **3.** Press the SET key to delete the character where the cursor blinked.

How to insert space for entering a character in any position?

- Move the cursor to the position where a character needs to be entered using the < or > key.
- 2. Press the MENU/POWER key three times to display the screen for checking the entry.
- 3. Press the SET key to insert space for entering the character before the character position where the cursor blinks.


4.2 Setting the Judgment Range of High/Low Limit Temperatures

Set the judgment points of high and low temperatures for judging measured temperatures. This setting is made for each tag name. This judgment is conducted from the time when measurement is started.


■ Procedures

Example: When setting a high temperature of 90.0 °C and a low temperature of 50.0 °C for Tag No.2 (tag name: PAN02)


1. Press the SET key at the tag name screen of Tag No.2 to display the judgment point of high limit temperature setting screen.

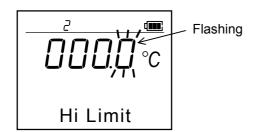


2. Press the < key to flash the tens digits.

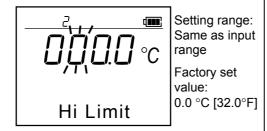


3. Press the \triangle key to change the number to

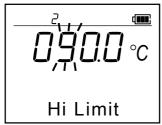


4. Press the SET key to store the new value. The display goes to the next screen (Judgment point of low limit temperature).

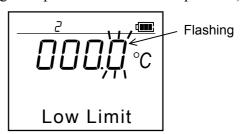

5. Press the < key to flash the tens digits.

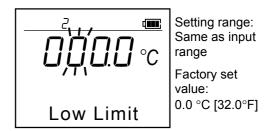

6. Press the ▲ key to change the number to
 5.

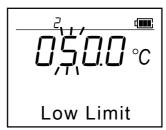

7. Press the SET key to store the new set value. The display returns to the tag name screen of Tag No.2.

The setting is finished.

To return to the measurement screen after the setting is finished, press the ESC key three times.

4.3 Judging Measured Temperatures

The judgment criteria of a measured temperature is described by referring to the following example.

• Measured object: Hot water

• Tag number: 2 (tag name: PAN02)

• Judgment criteria: Judgment point of high limit temperature 90.0 °C


Judgment point of low limit temperature 50.0 °C

■ Procedures

1. Turn on the power. The measurement screen appears on the LCD.


2. Press the > key. Tag name is displayed in the message column.

First check whether or not a displayed screen is for the tag name of Tag No.2. If not, press the ▲ or ▼ key to select the tag name of Tag No.2.

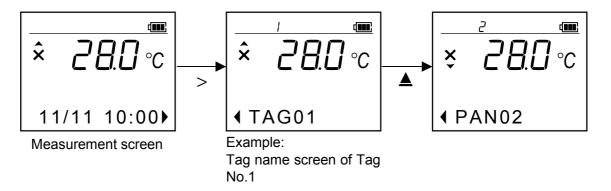


The tag name displayed when the > key is pressed is that with the tag number selected last, which continues to be displayed until the power is turned off.

For example, if the tag name of Tag No.5 is selected last, the tag name of Tag No.5 is displayed in the message column when selected to the tag name from the measured date.

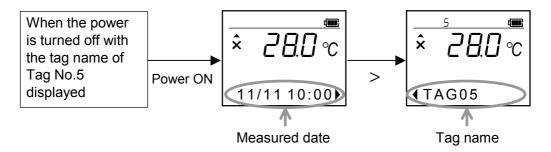


Continued on the next page.


- 3. Temperatures in a measured object are measured.
 - When exceeding the judgment point (90.0 °C) of high limit temperature

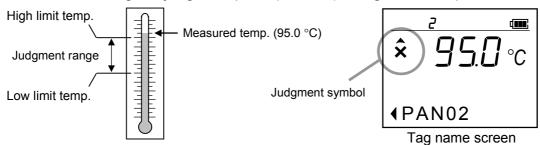

• When falling below the judgment point (50.0 °C) of low limit temperature

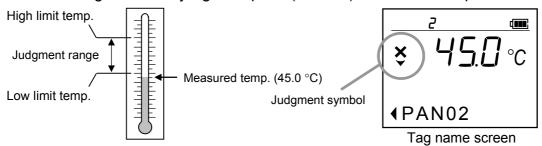

When within the judgment points (50.0 to 90.0 °C)

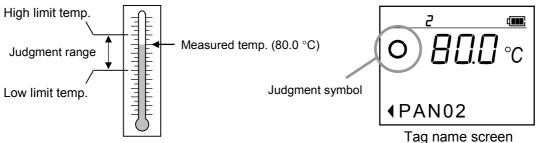

Thus, the judgment of measured temperatures has been finished.


When needing to record measured temperatures * in the memory, see 5. RECORDING MEASURED TEMPERATURES [LOGGING FUNCTION] (P. 17).

* No result of judgment can be recorded in the memory.

5. RECORDING MEASURED TEMPERATURES [LOGGING FUNCTION]

This chapter describes the procedure for recording measured data in the memory using the logging function.

Both manual recording and automatic recording are available for recording measured data in the memory. The measured data is recorded on the function menu "Memory (Fn1)" display screen manually or automatically. The data is recorded in the memory in the order of arrival.

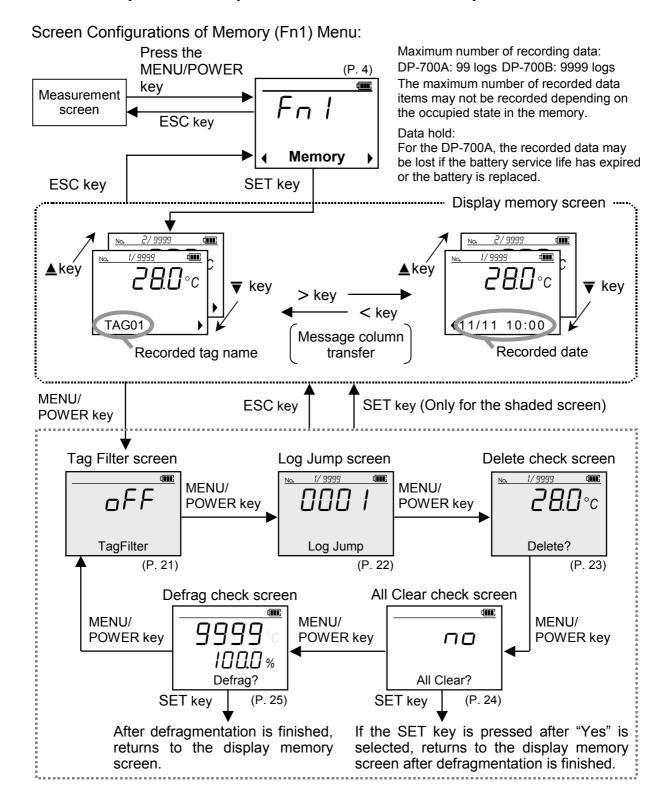

5.1 Manual Recording

Measured data * just when the REC key is pressed is recorded in the memory. Only when the REC key is pressed, **REC** is displayed.


* Recordable measured data:

Measured temperature, Measured date (excluding "Year"), Measured tag No. (tag name), Measured user No.

■ Recording

Press the REC key while measured. The measurement result displayed on the screen is recorded in the memory.

Example: When measured temperatures are recorded on the tag name screen of Tag

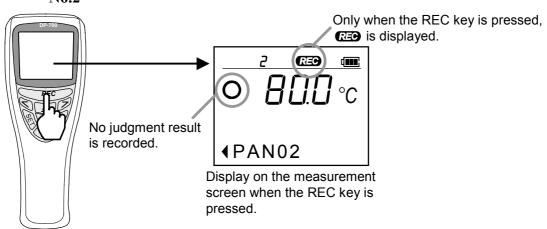


Checking of recording

Press the MENU/POWER key while displaying the measurement screen to display the Memory (Fn1) screen.

Pressing the SET key displays the recorded measured-data memory screen to be able to check the recorded measured-data.

Example: When the memory screen in the above example is displayed

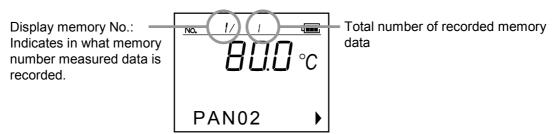

If two or more recorded data items need to be checked in order, press the ▲ or ▼ key.

It is possible to change the display (tag name or recorded date) in the message column. If necessary, press the < or > key.

5.2 Automatic Recording


Measured data * is recorded in the memory at time intervals preset. For automatic measured-data recording, the time interval needs to be set. Set it according to the following procedure.

* Recordable measured data:

Measured temperature, Measured date (excluding "Year"), Measured tag No. (tag name), Measured user No.


■ Setting interval time

1. Press the MENU/POWER key three times at the measurement screen to display the function menu "Logging (Fn3)" screen.

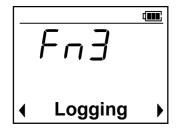

2. Press the SET key.

The display goes to the interval time setting screen.

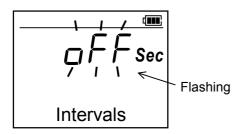

Interval time:

Setting range:

OFF (Manual logging)


1 to 3600 seconds (Automatic logging)

Factory set value:

OFF (Manual logging)

3. Set the interval time by the ▲ key and the shift key (<, >).

(Example: Interval time 15 seconds)

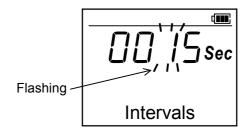

4. Press the SET key to store the new set value. The display returns to the Logging (Fn3) screen. If the interval time is set, **REC** flashes (recording stop).

The setting finished.

To return to the measurement screen after the setting is finished, press the ESC key.

How to cancel the interval time setting?


Press the ESC key. The display returns to the Logging (Fn3) screen.

■ Recording

Press the REC key at the measurement screen. Recording starts at time intervals preset.

REC keeps lighting while being recorded.

Example: When automatic measured-temperature recording is started while the tag name screen of Tag No.2 is displayed.

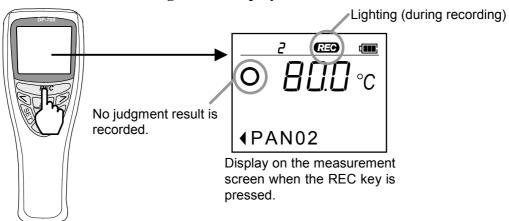

If the power is turned off by pressing the MENU/POWER key or even if the power is turned off by the activation of the Auto power OFF function, during recording (REG being lit) data recording continues at time intervals preset.

■ Recording stop

Press the REC key. **REC** flashes to stop data recording.

How to return to manual recording?

First, stop data recording and then turn the time interval to "OFF."


For the interval time setting, **Setting interval time** (P. 19).

■ Checking of recording

To the checking of recording, see 5.1 Manual Recording (P. 18).

It is also possible to check recorded measured-data by opening the display memory screen while automatic recording is being made.

As the measured data being checked is displayed on the display memory screen, no measured data being recorded is displayed. In this case, the total number of recorded memories is counted every time the data is recorded.

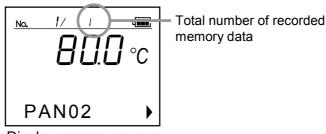

Display memory screen

5.3 Retrieving Recorded Data

Measured data is recorded in the memory in the order of arrival. The following two types of retrieval are available for checking any tag name and recorded measured-data recorded in the memory. Use either one of them depending on your application.

Tag filter: Only measured data with any tag name is retrieved and then displayed.


Log jump: Recorded measured-data is displayed by specifying the display memory number.

5.3.1 Retrieving only recorded data with specified tag name (Tag Filter)


As measured data is recorded in the order of arrival, there may be a case where no data is recorded for each tag name. It is possible to retrieve and then display only the measured data with the specified tag name bay setting this tag filter.

■ Procedures


I. Press the MENU/POWER and SET keys in this order while displaying the measurement screen to display the display memory screen.

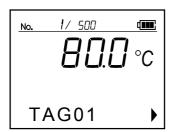


2. Press the ▲ or ▼ key while displaying the display memory screen to display the log name to be retrieved.

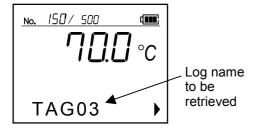


3. Press the MENU/POWER key to display the Tag Filter screen.

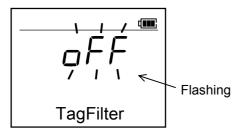

4. Press the \triangle key to change the item to "ON."

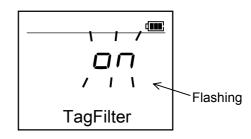

5. Press the SET key to store the new set value. Returns to the display memory screen with the log name to be retrieved.

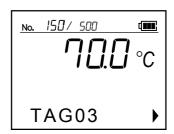

6. Pressing the ▲ or ▼ key displays only the display memory screen with the log name retrieved. To return to the measurement screen, press the SET key twice.

How to release the log filter?


Change the log filter setting to "OFF" by pressing the **▼** key and then press the SET key.

5.3.2 Retrieving recorded data with specified log registered No. (Log Jump)


It is possible for the DP-700A to record up to 99 logs and for the DP-700B, up to 9999 logs, respectively, For this reason, it is more difficult to select the display memory screen of data to be checked as the number of recording data items increases. It is possible to retrieve and then display any data with specified display memory number by setting this Log Jump.

■ Procedures


1. Press the MENU/POWER key and SET key in this order while displaying the measurement screen to display the display memory screen.

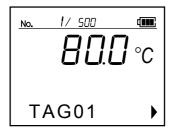

2. Press the MENU/POWER key twice to display the Log Jump screen.

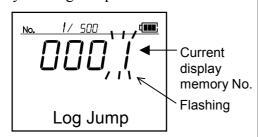

Press the ▲ key, ▼ key, or the shift key
 (< , >) to display the log name to be retrieved.

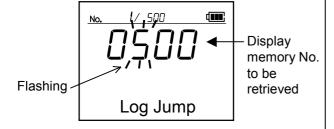

4. Press the SET key.

Displays the screen with the display memory number specified. To return to the measurement screen, press the SET key twice.



How to cancel the log jump?

Press the ESC key.

The display returns to the Logging (Fn3) screen.


5.4 Deleting Recorded Data

The following two types of procedure are available for deleting measured data recorded in the memory.

Deleted?: Deletes only one recorded data item. **All data deleted?:** Deleted all recorded data items.

5.4.1 Deleting only one recorded data item (Delete?)

Can delete only one recorded data item selected. If the procedure for this deletion is executed, the display memory number and the total number of recorded data items decrease by one.

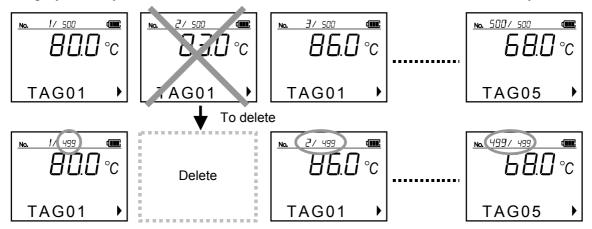


■ Procedures


1. Press the MENU/POWER key and SET key in this order while displaying the measurement screen to display the display memory screen.



2. Press the ▲ or ▼ key while displaying the display memory screen to display the screen to be deleted.

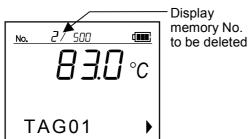

3. Press the MENU/POWER key three times to display the delete check screen.

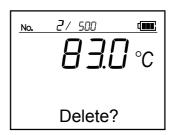

Haw to cancel "Delete?"

Press the ESC key.

The display returns to the display memory screen.


4. Pressing the SET key executes the procedure for this deletion. The display returns to the display memory screen. To return to the measurement screen, press the SET key twice.

5.4.2 Deleting all recorded data items (All Clear?)


Can delete all recorded data items recorded.

■ Procedures


1. Press the MENU/POWER and SET keys in this order while displaying the measurement screen to display the display memory screen.

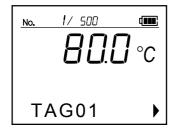

2. Press the MENU/POWER key four times to display the All Clear check screen

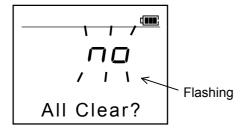

3. Press the ▲ key to change the item to "YES."

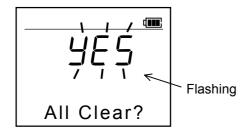

How to cancel "YES"?

Press the ESC key.

The display returns to the display memory screen.

To return to the measurement screen, press the ESC key three times.


4. Pressing the SET key executes the procedure for this deletion (All Clear).

The following progress check screen is displayed during the execution of this deletion.

Do not press the key until this screen automatically disappears.

Returns to the measurement screen after the procedure for this deletion is finished.

No deletion is suspended even it the ESC key is pressed while the procedure for this deletion is in progress.

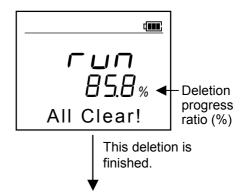

Returns to the measurement screen

5.5 Defragmenting Recorded Data


If measured data recording and deleting operation are repeated, the recording memory capacity may become insufficient. However, it becomes possible to efficiently secure the recordable area by rearranging recorded data in the memory and defragmenting the memory area.

■ Procedures

I. Press the MENU/POWER and SET keys in this order while displaying the measurement screen to display the display memory screen.



2. Press the MENU/POWER key five times to display the defrag check screen.

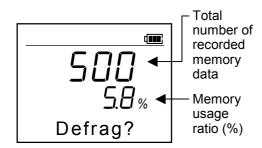

How to cancel the procedure for this defragmentation?

Press the ESC key.


The display returns to the display memory screen. To return to the measurement screen, press the ESC key twice.

3. Pressing the SET key executes the procedure for this defragmentation.

The following progress check screen is displayed while defragmentation is being executed. Time required for this defragmentation differs depending of the memory area being used.

Do not press the key until this screen automatically disappears.

Returns to the display memory screen after the procedure for this defragmentation is finished.

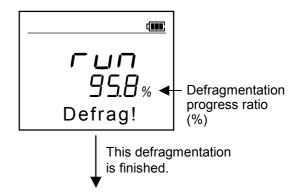

Returns to the display memory screen

To return to the measurement screen, press the ESC key twice.

The defragmentation is possible even during automatic recording. In addition, automatic recording continues after the defragmentation is finished.

6. PEAK HOLD/BOTTOM HOLD

The peak hold/bottom hold function is used to store (hold) the maximum (peak) and minimum (bottom) measured temperature. Each of these values is updated when the measured temperature becomes more (or less) than the value now being held.

- However, if the following operation is performed, the value now being held is reset and as a result the measured temperature just when reset becomes the peak hold or bottom hold value
 - When replaced the battery.
 - When changed sensor type, display unit or decimal point position
 - When reset (peak/bottom) by the key operation


Power ON Automatically Measurement Memory (Fn1) **TAG Setup** (Fn2) Logging (Fn3) Peak/Bottom (Fn4) **User Name** (Fn8) Setup (Fn9) Utility (Fn0) Returns to Memory (Fn1) screen ESC key Returns to Measurement screen


MENU/POWER

key or > key


■ To display the peak hold value/bottom hold value

- 1. Press the SET key at Peak/Bottom (Fn4) screen. The display goes to Peak hold value screen.
- 2. Press the SET key. The display goes to Bottom hold value screen.
- **3.** Press the SET key. The display returns to Peak hold value screen.

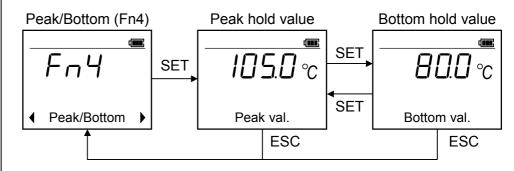

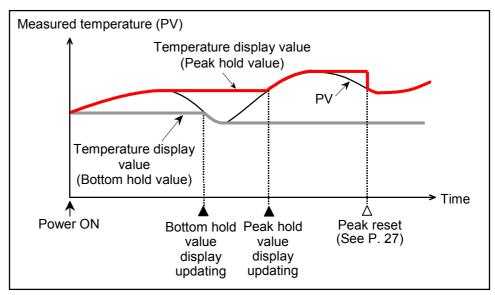

Peak/bottom hold action description

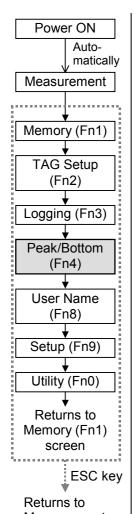

Measurement screen

↓ : Press the MENU/POWER key or > key


■ To reset the peak hold value

- 1. Press the MENU/POWER key at Peak hold value screen.
- 2. "Peak rst?" is displayed in the message column.

To execute reset: Press the SET key.

To cancel reset: Press the ESC key.

3. The display returns to Peak hold value screen.

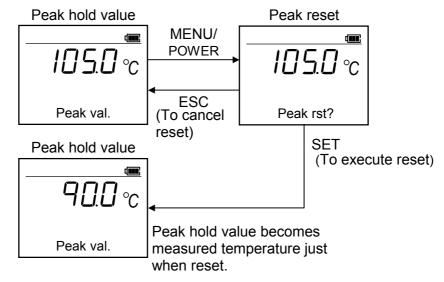


■ To reset the bottom hold value

- 1. Press the MENU/POWER key at Bottom hold value screen.
- 2. "Bottom rst?" is displayed in the message column.

To execute reset: Press the SET key.

To cancel reset: Press the ESC key.

3. The display returns to Bottom hold value screen.

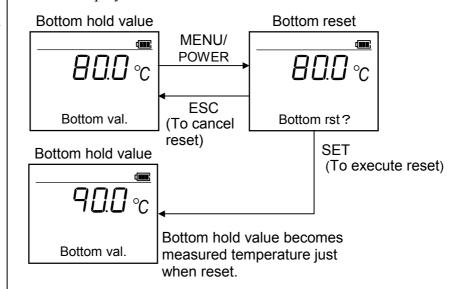


7. REGISTERING USER NAMES [ONLY FOR DP-700B]

This chapter describes the procedure for registering user name.

Any user name can be registered (11 characters max.) for each user number. In addition, it is possible to set the user by selecting the user number. The user thus set is retained until the power is turned off. The registered user name is displayed when the power is turned on.

Screen configurations of User Name (Fn8) menu:

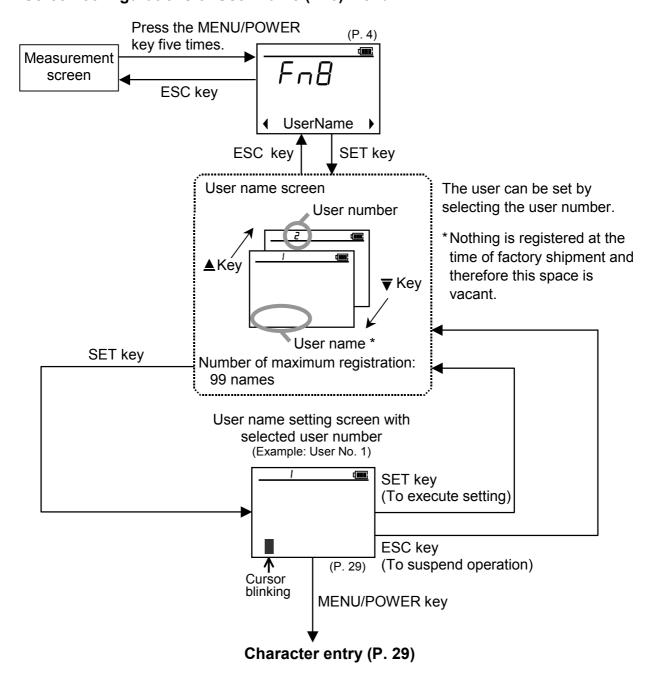


■ Character entry screen

Example: When the user name screen of user No. 1 is selected.

User name setting screen

Character selecting screen

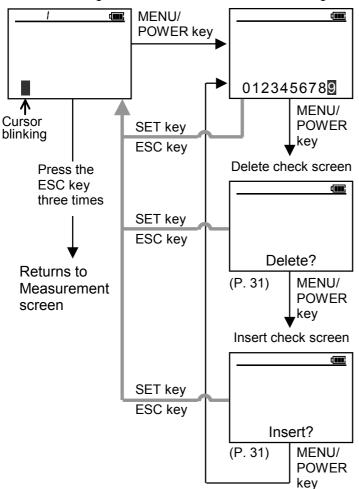

A list of characters including the currently selected character (cursor blinking) is displayed in the message column.

Select the list of characters by the $\overline{\blacktriangledown}$ or $\underline{\blacktriangle}$ key and then select the desired character by the \lessdot or \gt key.

SET key: To execute selection ESC key: To suspended operation

Screen used to check whether or not the currently selected character (cursor blinking) is deleted.

SET key: To execute deletion ESC key: To suspend operation

Screen used to check whether to insert space for entering a character in the position displayed with the currently selected character (cursor blinking).

SET key: To execute insertion **ESC key:** To suspend operation

Characters list

 Onlar a otor o not			
Numerals	0123456789		
Alphabets	ABCDEFGHI		
	JKLMNOPQR		
	STUVWXYZ		
	abcdefghi		
	jklmnopqr		
	stuvwxyz		

Symbols	@!#\$%&'`
	+;=^_
	()[]{}


No spaces (no characters) can be used.

Select the list of characters by the ▲ or ▼ key.


■ Procedures

Example: Registers the user name "RKC" to user No. 1.


1. Press the SET key at User Name menu (Fn8) screen. The display goes to user name screen of user No. 1.

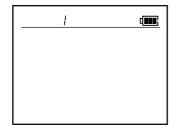

2. Press the SET key.
The cursor is displayed

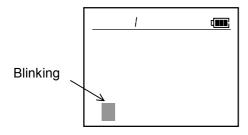

3. Press the MENU/POWER key.
The list of characters is displayed in the message column.

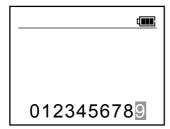


Press the ▼ key twice.
 The list of characters including "R" is displayed.



5. Press the SET key to store "R."


The screen returns to the user name screen of user No. 1 and the cursor moves to the right.

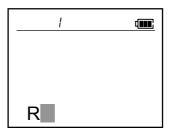

6. Press the MENU/POWER key. The list of characters is displayed in the message column.




7. Press the < key to move the cursor to the position displayed with "K."

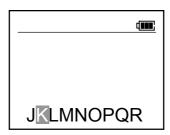


8. Press the SET key to store "K."

The screen returns to the user name screen of user No. 1 and the cursor moves to the right.

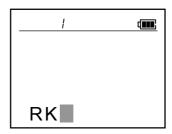


Press the MENU/POWER key. The list of characters is displayed in the message column.

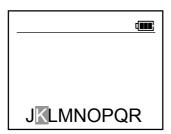


10. Press the \triangle key.

The list of characters including "C" is displayed.

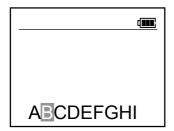


11. Press the > key to move the cursor to the position displayed with "C."

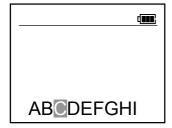


12. Press the SET key to store "C."

The screen returns to the user name screen of user No. 1 and the cursor moves to the right.

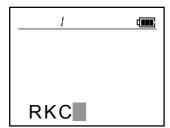

13. Press the SET key to store the "RKC." The cursor disappears. The name setting is finished.

To return to the measurement screen, press the ESC key twice.

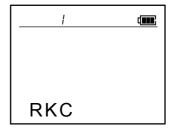

How to change the character without displaying the list of characters?

- Move the cursor to the position displayed with the character to be revised by using the < or > key.
- 2. Display the character to be revised by using the ▲ or ▼ key.

How to delete one character?


- Move the cursor to the position displayed with the character to be deleted using the < or > key.
- 2. Press the MENU/POWER key twice to display the screen for checking the deletion.
- **3.** Press the SET key to delete the character where the cursor blinked

How to insert space for entering a character in any position?

- Move the cursor to the position where a character needs to be entered using the < or > key.
- 2. Press the MENU/POWER key three times to display the screen for checking the entry.
- 3. Press the SET key to insert space for entering the character before the character position where the cursor blinks.

8. INITIAL SETTING

This chapter introduces each function which can be set according to the customer applications. For items that are not necessary to be changed, use the same setting values as the factory set values.

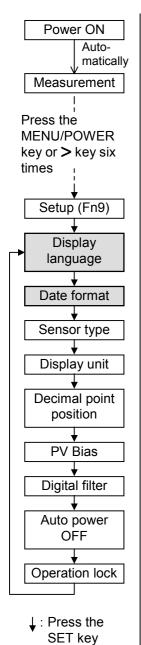


■ To select the display language (English/Japanese)

Select the language (English/Japanese) which needs to be displayed on the screen.

1. Press the \triangle or ∇ key to select the "English or Japanese."

Data range: English or Japanese

Factory set value: English

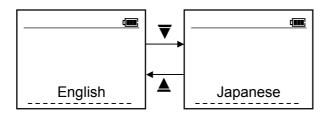

- 2. Press the SET key to store the new set value.
- To return to the measurement screen, press the ESC key twice.


■ To select the date format

Select the date format.


1. Press the \triangle or ∇ key to select the "Date format."

Data range: month/day or day/month

Factory set value: month/day

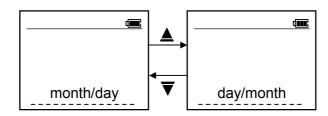

- 2. Press the SET key to store the new set value.
- To return to the measurement screen, press the ESC key twice.

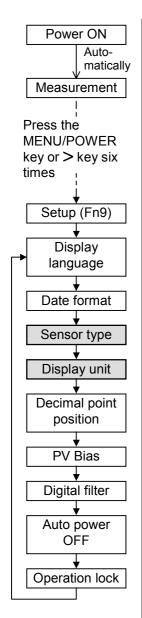

Press the SET key

■ To select the sensor type

Select the sensor type used for measurement.


1. Press the \triangle or ∇ key to select the "Sensor type."

Data range: TC-K: Thermocouple K

TC-J: Thermocouple J

Pt100: RTD Pt100

Factory set value: TC-K (Thermocouple K)

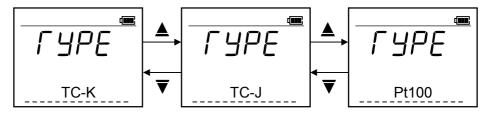


- 2. Press the SET key to store the new set value.
- To return to the measurement screen, press the ESC key twice.

■ To select the display unit (°C/°F)


Select the display unit of measured temperature.

1. Press the ▲ or ▼ key to select the "Display unit."

Data range: °C or °F Factory set value: °C

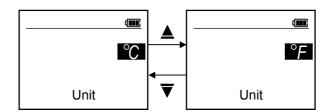

- 2. Press the SET key to store the new set value.
- To return to the measurement screen, press the ESC key twice.

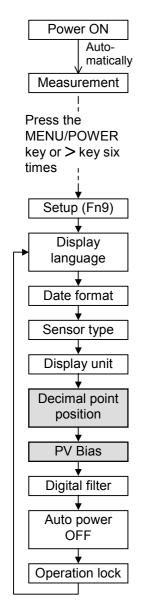

Press the SET key

■ To select the decimal point position


Select the decimal point position of input range.

1. Press the \triangle or ∇ key to select the "Decimal point position."

Data range: 0.1: One decimal place

1: No decimal place

Factory set value: 0.1 (One decimal place)

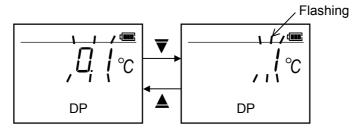

- 2. Press the SET key to store the new set value.
- To return to the measurement screen, press the ESC key twice.


■ To correct the temperature display value (PV Bias)

Set the bias (correction value) added to the measured temperature for sensor correction. The PV bias is used to compensate the individual variations of the sensors or correct the difference between the measured temperatures of other instruments.

- 1. Press the < or > key to move the flashing digit.
- 2. Press the \triangle or ∇ key to set the "Correction value."


Data range: -99.9 to +99.9 °C (°F)


Factory set value: 0.0

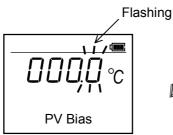

To return to the measurement screen, press the ESC key twice.

3. Press the SET key to store the new set value.

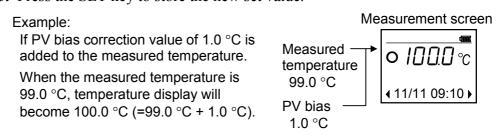

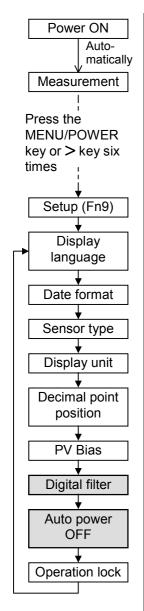

Press the SET key


■ To lessen the fluctuation of a display value caused by noise (Digital Filter)

Set the time of the first-order lag filter eliminate noise against the measured input. The digital filter is used to lessen the fluctuation of a display value caused by noise.

- 1. Press the < or > key to move the flashing digit.
- 2. Press the ▲ or ▼ key to set the "filter time."

Data range: OFF (Unused), 1 to 100 seconds

Factory set value: OFF

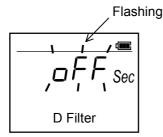

- 3. Press the SET key to store the new set value.
- To return to the measurement screen, press the ESC key twice.


■ Saving battery consumption (Auto Power OFF)

Set the time until the power is automatically turned off after no key operation is performed.


- 1. Press the < or > key to move the flashing digit.
- 2. Press the ▲ or ▼ key to set the "Auto power OFF time."

Data range: OFF (Unused), 1 to 60 minutes

Factory set value: 3

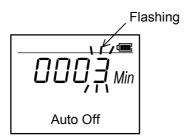

- 3. Press the SET key to store the new set value.
- To return to the measurement screen, press the ESC key twice.

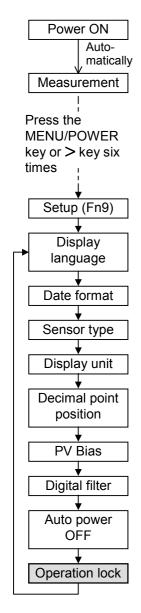


Press the SET key

■ Locking/Unlocking setting operation (Operation Lock)

Select setting disabled (locked)/setting enabled (Unlocked) for each item. Misoperation during usage can be prevented.

- 1. Press the < or > key to move the flashing digit.
- 2. Press the ▲ or ▼ key to set the "Disabled (locked)/setting enabled (Unlocked)."

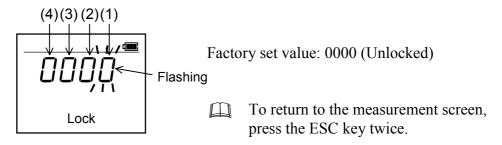

	Setting items	Data range
(1)	Calendar timer (date and time) setting	0: Setting enabled (Unlocked).
(2)	Setting items of Logging (Fn3), User Name (Fn8) and Setup (Fn9) menus.	1: Disabled (locked)
(3)	Setting items of TAG Setup menu (Fn2)	
(4)	Deletion of record data (1 or all records data)	

3. Press the SET key to store the new set value.

9. MANAGING DATA BY PC [ONLY FOR DP-700B]

For the DP-700B, it is possible to manage recorded (logging) temperature data, tag and initial set data stored in the memory by a personal computer with the DP-700B connected to the USB port of the computer.

This chapter describes procedures for connecting the DP-700B to a personal computer and also for managing stored data.

<System Requirements for a USB Connection>

Personal Computer: DOS/V PC and PC98-NX Series loaded with USB port (USB 2.0/1.1)


OS: Windows XP Home Edition/Professional, Windows Me,

Windows 2000 Professional

9.1 Connecting PC to DP-700B

As the DP-700B is operated by the OS standard driver, it can be used only by connecting it to a PC.

- 1. The DP-700B is connected to the USB port of a PC using the USB cable attached. The DP-700B can be connected with the power turned on or off. *
- 2. The message "***USB***" is displayed on the bottom of the DP-700B screen to disable key operation. In addition, data logging stops when being logged.
- If the DP-700B is used for the first time, the OS standard driver is automatically installed. When this OS corresponds to Windows XP or Windows 2000, start the windows system with the DP-700B unconnected to log on as a user having the authority of computer manager. First start the system, and then connect the PC to the DP-700B.

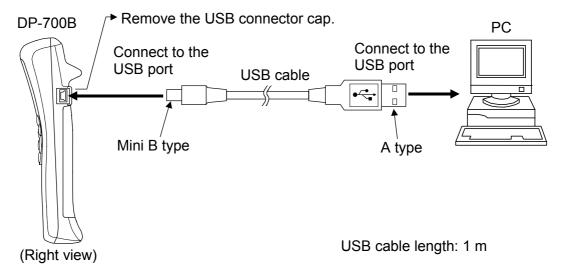

- * The DP-700B is compatible with the USB bus power. The power is supplied from the USB port on the PC side via the USB cable when connected with USB. It is possible to manage data by connecting USB even with the DP-700B power turned off..
- **3.** Open "My computer" of Windows to newly add the "Removable disk" icon.

9.2 Storing Data

Open "My computer" of Windows to double click the "Removable disk" icon.

Thus, three CSV files in the DP-700B memory area displayed.

LOG_□.CSV: Recorded (logging) temperature data

TAG_□.CSV: Tag setting data SETUP_□.CSV: Initial setting data

The LOG_□.CSV, TAG_□.CSV and SETUP_□.CSV files are created when the DP-700B is connected to USB.

As a file name of each file created, characters of identifying each entity (DP-700B) are entered in \square . Thus, two or more DP-700B files are identified.

If no temperature data is stored within the DP-700B memory, the LOG_□.CSV file is not displayed.

■ LOG_□.CSV (Recorded temperature data)

Recorded (logging) temperature data. Read only file. It can be opened and referred to by table calculation software such as Excel. In addition, it can be copied it stored at a location other than the DP-700B using a new name.


CAUTION

Deleting the LOG_\(\sigma\). CSV file also clears all recorded temperature data within the DP-700B memory. Take care not to delete necessary recorded temperature data.

If no temperature data is stored within the DP-700B memory, the LOG_□.CSV file is not displayed.

Contents of file: Memory No., Date, Time, Temperature, Tag No., User No.

< When opened by Excel >

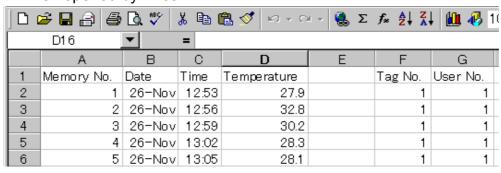

■ TAG_□.CSV (Tag setting data)


DP-700B tag setting data. Writable/readable file. If it is opened by table calculation software such as Excel and then is edited and overwrite-stored, the setting can be reflected to the DP-700B.

Writes is inhibited if setting items in the TAG Setup menu (Fn2) is set to "Not be set (locked)." See Locking/Unlocking setting operation (P. 36).

Contents of file:

Name	Data range	Factory set value
Tag No.	1 to 99	_
Tag Name	11 characters	TAG01 to 99
	See List of usable characters (P. 41)	
Judgment point of high temperature	Same as temperature input range	0.0 °C or 32.0 °F
Judgment point of low temperature	Same as temperature input range	0.0 °C or 32.0 °F

< When opened by Excel >

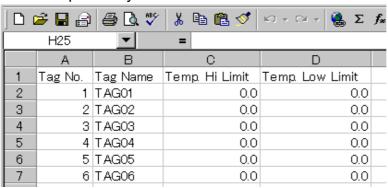

■ SETUP_□.CSV (Initial setting data)

DP-700B initializing setting data. Writable/readable file. If it is opened by table calculation software such as Excel and then is edited and overwrite-stored, the setting can be reflected to the DP-700B.


Writes is inhibited if setting items in the Logging (Fn3), User Name (Fn8) and Setup (Fn9) menus are set to "Not be set (locked)."

See ■ Locking/Unlocking setting operation (P. 36).

Contents of file:

Name	Command	Data range	Factory set value
User name	User=	11 characters	Blank (No name)
		See List of usable	
		characters (P. 41)	
Display language	Language=	0: Japanese	1
		1: English	
Date format	Date_format=	0: Month/Day	0
		1: Day/Month	
Sensor type	Input=	0: Thermocouple K	0
		1: Thermocouple J	
		2: RTD (Pt100)	
Display unit	Unit=	0: °C	0
		1: °F	
Decimal point	TempDP=	0: No decimal place	1
position	_	1: One decimal place	
PV bias	TBias=	−99.9 to +99.9 °C (°F)	0.0
Digital filter	TFilter=	0 to 100 seconds (0: OFF)	0
Auto power OFF	AutoOFF=	0 to 60 minutes (0: OFF)	3
Interval time	Interval=	0 to 3600 seconds (0: OFF)	0

< When opened by Excel >

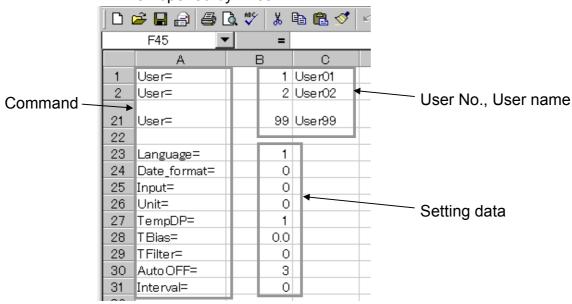

List of usable characters

Numeral	0123456789
Alphabets	ABCDEFGHI
	JKLMNOPQR
	STUVWXYZ
	abcdefghi
	jklmnopqr
	stuvwxyz
Symbols	@!#\$%&'`
	+;=^_
	()[]{}


Spaces cannot be used.

■ Storing data in hard disk of PC

Copy data to the hard disk of the PC using Windows Explorer.

9.3 Disconnecting DP-700B from PC

Disconnect the DP-700B from the PC after the PC power is turned off or according to the following steps

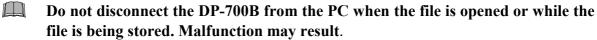

- The DP-700B can be disconnected with the power turned on or off.
- The disconnecting procedure is described in "Windows 2000." Icons and windows displayed differ depending on OS used. For details, refer to the manual for "Windows."
- 1. Check that the file is not opened or it is being stored. Close when the file is opened.
- 2. Click the "Hardware removal" icon in the system tray of the task bar and then select the drive from the pop-up menu.



- 4. If the message "Removal OK" is displayed, click the "OK" button.
- 5. Disconnect the DP-700B from the PC.

10. APPENDIX

10.1 Replace the Battery

If (Battery service life is going to expire) is displayed, immediately replace the battery.

Replace battery: Type LR6 (based on IEC and JIS) alkaline battery, One battery

Battery life: Can be operated for 400 hours continuously (Around the ambient

temperature 23 °C). However, the battery service life varies depending on the operating condition and environment. Therefore, the above service

life period is only for reference.

If the battery is replaced, the instrument is reset-started. Therefore, there are some data items to be initialized. In addition, for the DP-700A all recorded data items are deleted. The state of each data when the battery is replaced (when reset-started) is shown in the following.

Monitor items


Name	DP-700A	DP-700B	
Peek hold	Reset		
	(Peak hold value becomes measured temperature just when reset.)		
Bottom hold	Reset		
	(Bottom hold value becomes measured temperature just when reset.)		
Recorded (logging) data	All recorded data clear	Hold	

Setting items


Name	DP-700A	DP-700B	
Tag Filter	Initialize (OFF)		
Tag Name	Initialize (TAG01 to 05)	Hold	
Judgment point of high temperature	Initialize (0 °C or 32°F)	Hold	
Judgment point of low temperature	Initialize (0 °C or 32°F)	Hold	
Interval time	Но	old	
User No. selection		Initialize (User No. 1)	
User name		Hold	
Display language	Но	old	
Date format	Hold		
Sensor type	Hold		
Display unit	Hold		
Decimal point position	Hold		
PV bias	Hold		
Digital filter	Но	old	
Auto power OFF	Но	old	
Operation lock	Calendar timer setting: Can be set (Unlock)		
	Other setting items: Hold		
Year	Initialize (0)		
Date	Initialize (01/01)		
Time	Initialize (00:00)		

■ Procedures

- 1. Press the MENU/POWER key for more than two seconds to turn off the DP-700 power.
- 2. Loosen the battery cover.

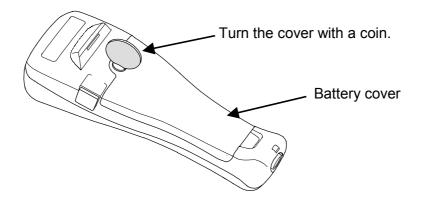


- *3.* Remove the battery cover.
- 4. Remove the old battery. Load a new battery without mistaking its polarity.

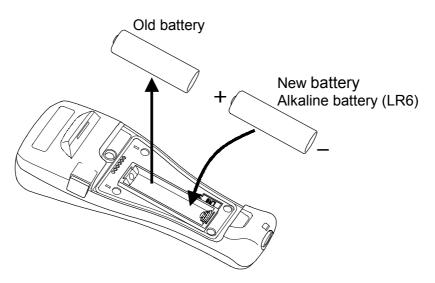

- 5. Then, firmly tighten the battery cover.
- Insufficient tightening cannot assure the effect of water resistance (DP-700A: Equal to IP67, DP-700B: Equal to IP54).
- After the battery is loaded, the instrument is ready to be reset-started.

The function menu "Utility (Fn0)" for setting the dominical year is displayed on the LCD screen. If no dominical year is set, no calendar function can be used. Always set the year if the calendar function is used.

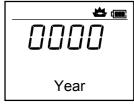

Year setting screen

Pressing the ESC key twice can display the measurement screen.

10.2 Cleaning

Turn off the power supply before cleaning the instrument.

Moisten a soft cloth with a diluted neutral detergent, completely wring the cloth, then wipe the instrument with cloth. Do not use a volatile solvent such as paint thinner to clean the instrument. Deformation or discoloration will occur.

The DP-700A can be washed in flowing water as it has water and dust resistant characteristics equal to IP67.

However, the DP-700B (Water/dust resistance equal to IP54) cannot be washed in flowing water.

10.3 Troubleshooting

This section describes probable causes and treatment procedures if any abnormality occurs in the instrument. For any inquiries, please contact RKC sales office or the agent, to confirm the specifications of the product.

Prior to replacing the sensor, always turn off the power.

10.3.1 Error displays

Displays and description of errors are described in the following table:

Display	Description	Solution	
₫	Service life is going to expire.	Replace the new battery. See 10.1 Replace the Battery (P. 42).	
	Service life has expired.		
*	Burnout The sensor is broken, shorted or imperfectly connected.	Check sensor and sensor connection.	
¥□□□□°C [Flashing]	Overscale Measured temperature is above the 5 % of measuring range high limit value or display range limit high (9999).	Check input type, input range, sensor and sensor connection.	
¥ ☼ [Flashing]	Underscale Measured temperature is below the 5 % of measuring range low limit value or display range limit low (–1999).		

Continued on the next page.

Continued from the previous page.

Display	Description	Solution
Err 1)	Adjusted data error • Adjusted data range is abnormal.	First remove the battery, and then load it again after a lapse of a few seconds. If not normally operated with the battery re-loaded, please
Err 2)	EEPROM errorResponse signal from EEPROM is abnormal.Data write failure	contact RKC sales office or the agent.
E 4 (Err 4)	 A/D conversion error Response signal from A/D converter is abnormal. A/D conversion count value is out of the specified range. 	
Err 64)	Stack overflow • Stack point overflows	
Err 128)	Watchdog timer errorThe part of an internal task stops the action.	

If two or more self-diagnostic errors occur (Err 1, Err 2, Err 4, Err 64 and Err 128), the value obtained by adding the error number to the Err display is displayed.

10.3.2 Problem and solution

Problem, probable cause and solution of trouble described in the following table:

Problem	Probable cause	Solution
No power is turned on. (No display appears)	No battery is loaded.	Load a battery. See 2.1 Loading Battery (P. 5).
	The battery with less service life is used.	Replace the new battery. See 10.1 Replace the Battery (P. 42).
Measured temperature display is abnormal	The battery with less service life is used.	Replace the new battery. See 10.1 Replace the Battery (P. 42).
	Noise source is present near the instrument	Separate the noise source from the instrument.
		Set the digital filter. See ■ To lessen the fluctuation of a display value caused by noise (P. 35).
	Proper sensor is not used	Use the specified sensor.
	Sensor insertion depth is insufficient	Check whether sensor is inserted loosely. If yes, fully insert the sensor.
	Sensor insertion position is not appropriate	Insert the sensor at the specified location.
Measured temperature display value differs from the actual value	PV bias is set	Set the PV bias to "OFF." See To correct the temperature display value (P. 34). However, this is limited only to when the PV bias setting can be changed.
The display does not change No key operation is accepted	CPU overrun	First remove the battery, and then load it again after a lapse of a few seconds.
		If not normally operated with the battery re-loaded, please contact RKC sales office or the agent.

10.4 Specifications

■ Input

Input type: Universal input

Thermocouple: K, J (JIS-C1602-1995) RTD: Pt100 (JIS-C1604-1997)

Measuring range: Thermocouple K: -200 to +1372 °C (Resolution: 1 °C)

-328 to +2501 °F (Resolution: 1 °F) -199.9 to +999.9 °C (Resolution: 0.1 °C) -199.9 to +999.9 °F (Resolution: 0.1 °F)

Thermocouple J: -200 to +1200 °C (Resolution: 1 °C)

-328 to +2192 °F (Resolution: 1 °F) -199.9 to +999.9 °C (Resolution: 0.1 °C) -199.9 to +999.9 °F (Resolution: 0.1 °F)

RTD JPt100: $-200 \text{ to } +850 \text{ }^{\circ}\text{C} \text{ (Resolution: } 1 \text{ }^{\circ}\text{C)}$

-328 to +1562 °F (Resolution: 1 °F) -199.9 to +850.0 °C (Resolution: 0.1 °C) -199.9 to +999.9 °F (Resolution: 0.1 °F)

Sampling cycle: 0.5 seconds

PV bias: -99.9 to +99.9 °C (°F)
Digital filter: First order lag digital filter:

Time constant: 0 to 100 seconds (0: OFF)

Moving average: 4 times (fixed)

■ Performance

Display accuracy (At the ambient temperature 23 °C \pm 2 °C):

 \pm (0.1 % of display value + 1 digit) or \pm 0.3 °C (0.6 °F)

Less than the value whichever is greater

Cold-junction temperature compensation error:

 ± 0.5 °C (Within 5 to 40 °C)

 ± 1.0 °C (Within -20 to +5 °C and 40 to 50 °C)

Ambient temperature influence:

 $\pm 0.01\%$ /°C of span (Within 5 to 40 °C)

 $\pm 0.02\%$ /°C of span (Within -20 to +5 °C and 40 to 50 °C)

■ Display

Reflective FSTN LCD

Measured temperature: 4-digit
Display memory No.: 4-digit
Total number of recorded data: 4-digit

Message: $68 \times 8 \text{ dots } (11 \text{ characters})$

Recorded (logging) execution: Lit during execution, flashing during stop for automatic recording. **Burnout:** Lit when the sensor is disconnected, shorted or imperfectly

contacted.

Remaining battery service life: The remaining battery service life is indicated in three steps.

Temperature unit: $12 \times 8 \text{ dots } (^{\circ}\text{C}/^{\circ}\text{F})$

■ Data recording (logging)

Recording method: Manual logging mode: Can be manually recorded in the memory.

Automatic logging mode: Can be automatically recorded (in a set

interval) in the memory.

Interval time: 0 (Manual log mode), 1 to 3600 seconds
Recording items: Measured temperature, Tag name, Date, Time

Recording capacity: DP-700A: Maximum 99 logs

DP-700B: Maximum 9999 logs

Memory backup: DP-700A: Backed up by SRAM

The recorded data may be lost if the battery service

life has expired or the battery is replaced.

DP-700B: Backed up by non-volatile memory (EEPROM)

Number of writing: Approx. 100,000 times Data retaining period: Approx. 10 years Depending on storage and operating conditions

Simplified Judging Function

The judgment points of high and low temperatures are set. When within the judgment points, "O" is displayed while when out of the judgment point, "x" is displayed.

▲ is displayed, if out of the high judgment point, while ▼, if out of the low judgment point.

■ Tag number function

Number of maximum registration:

DP-700A: 5 tags DP-700B: 99 tags

Registration items: Tag name, judgment points of high and low temperatures

Tag name: 11 characters (Numeral, Alphabets, Symbols)

Memory backup: Same as Memory backup of Data recording (logging)

■ User name function (Only for DP-700B)

Number of maximum registration:

99 names

Number of character: 11 characters (Numerals, Alphabets, Symbols)

Memory backup: Same as Memory backup of Data recording (logging)

■ USB function (Only for DP-700B)

Interface: Based on USB (Universal Serial Bus) Ver2.0

Communication speed (Theory value):

Full Speed compliant (12 Mbps)

Connector type: USB series Mini-B

Connection: The DP-700B is connected to the USB port of a PC using the USB

cable attached.

Power supply: Bus power (The power is supplied from the USB port on the PC side.)

Device class: Mass Storage Class (Bulk-Only Transport)

Compatible OS: Windows XP Home Edition/Professional, Windows Me,

Windows 2000 Professional

■ Other functions

Peak and bottom hold, Calendar timer, Operation lock, Self-diagnostic

■ Power

Battery: Type LR6 (based on IEC and JIS) alkaline battery, One battery

Battery life: Approx. 400 hours (Continuous operating time, Around the ambient

temperature 23 °C).

However, the battery service life varies depending on the operating condition and environment. Therefore, the above service life period is

only for reference.

Power consumption: 10 mW (Mean value while operated)

■ Standards

Waterproof and dustproof: DP-700A: IP67

DP-700B: IP54

CE marking: EMC: EN61326, EN55011, EN61000-3-2 **C-Tick:** AS/NZS2064 (Equivalent to EN55011)

■ General specifications

Memory backup: Backed up by non-volatile memory (EEPROM)

Number of writing: Approx. 100,000 times
Data retaining period: Approx. 10 years
Depending on storage and operating conditions

Backup data: Interval time, Display language,

Sensor type, Display unit, Decimal point position, PV bias, Digital filter,

Auto power OFF, Operation lock,

Date format

Allowable ambient temperature:

−20 to +50 °C

However, in an environment of less than 0 °C, the LCD response

speed remarkably decreases.

Allowable ambient humidity: 5 to 95 % RH

Absolute humidity: MAX.W.C 29 g/m³ dry air at 101.3 kPa

Dimensions: $57 \text{ (W)} \times 152 \text{ (H)} \times 46 \text{ (D)} \text{ mm}$ **Weight:**Approx. 140 g (Including battery)

MEMO

The first edition: DEC. 2003 [IMQ00]



RKC INSTRUMENT INC.

HEADQUARTERS: 16-6, KUGAHARA 5-CHOME, OHTA-KU TOKYO 146-8515 JAPAN

PHONE: 03-3751-9799 (+81 3 3751 9799)

E-mail: info@rkcinst.co.jp

FAX: 03-3751-8585 (+81 3 3751 8585)

IMR01X01-E1 DEC. 2003